


9.5 DISPLAY SECTION

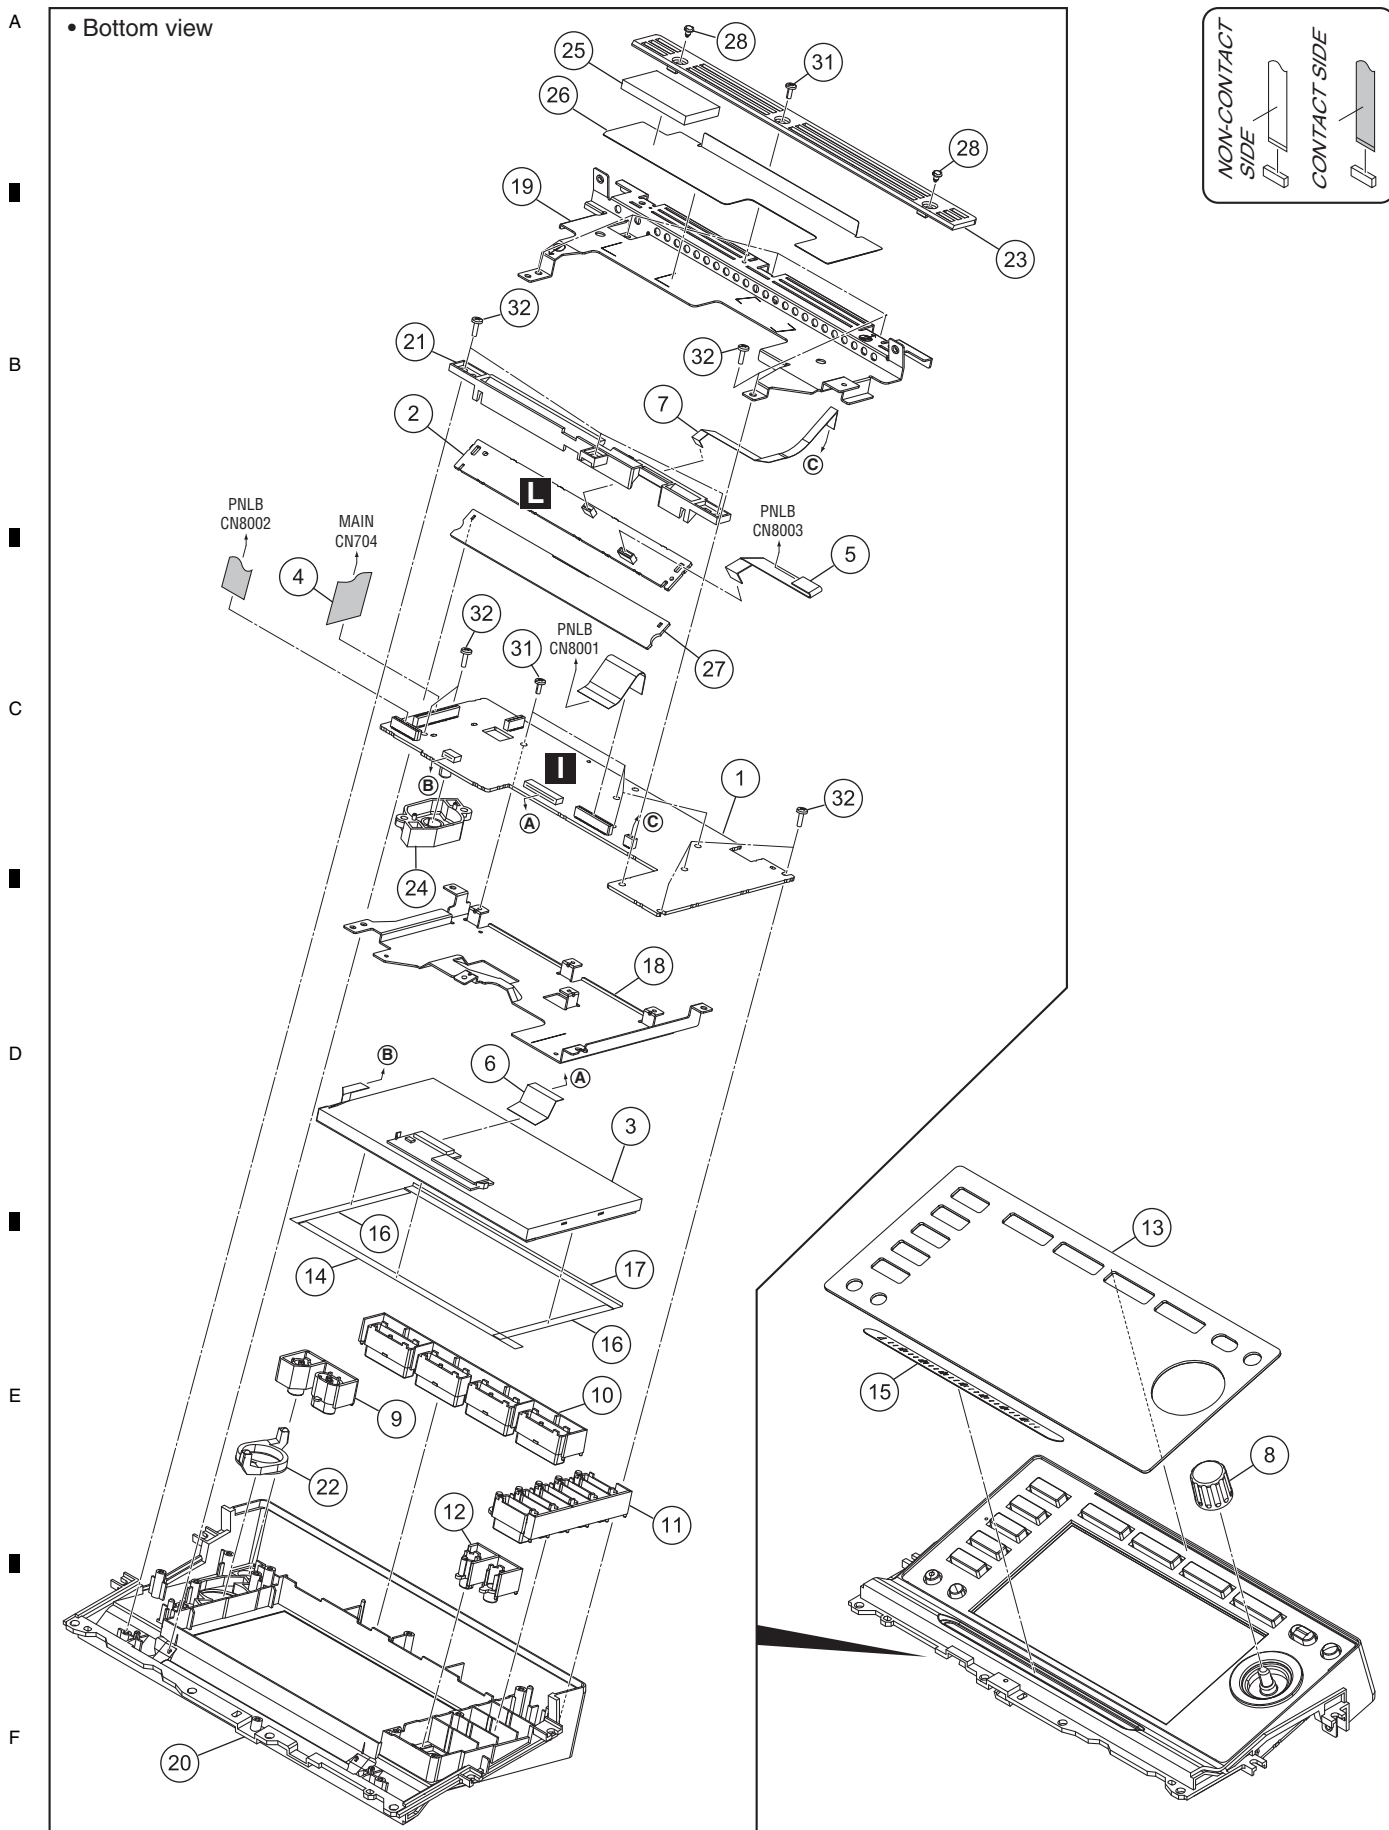

DISPLAY SECTION PARTS LIST

Mark No.	Description	Part No.	
1	TFTB Assy	DWX3331	
2	CDCB Assy	DWX3332	A
3	LCD Module	CWX3970	
4	29P FFC	DDD1481	
5	7P FFC	DDD1485	
6	40P FFC	DDD1541	■
7	FFC/4P	DDD1607	
8	Dial Knob	DAA1246	
9	Button (MENU)	DAC2480	
10	Button/MOD	DAC2807	
11	Button/DEV	DAC2808	B
12	Button/QUA	DAC2809	
13	Panel/DIS	DAH2874	
14	LCD Packing (Bottom)	DEC3184	
15	Sheet/CDC	DEC3395	■
16	LCD Packing (Side)	DEC3192	
17	Packing/TOP	DEC3376	
18	Stay/LCD	DND1269	
19	Bracket/LCD	DND1270	
⚠ 20	Control Panel/LCD	DNK6037	C
21	CDC Stay	DNK5320	
22	Ring Lens (BROWSE)	DNK5322	
23	LCD Bottom Plate	DNK5323	
24	Reflector	DNK5405	
25	Cushion/FFC	DEC3430	■
26	Barrier/RB	DEC3421	
27	Lens/CDC	DNK6017	
28	Rivet (Plastic)	RBM-003	
29			D
30			
31	Screw	BBZ26P060FTB	
32	Screw	BPZ26P080FTC	■

E

F